

33. Unlock the ANTENNA on the other side...



34. ...and remove it from the B-COVER.



35. Use a 3.5mm headset plug to unlock the AUDIO CONNECTOR.



36. AUDIO CONNECTOR drops out by turning the B-COVER.




37. Carefully remove the CAMERA GROUNDING SPRINGS.



38. Unlock the FLASH HOLDER...




39. ...and remove it.

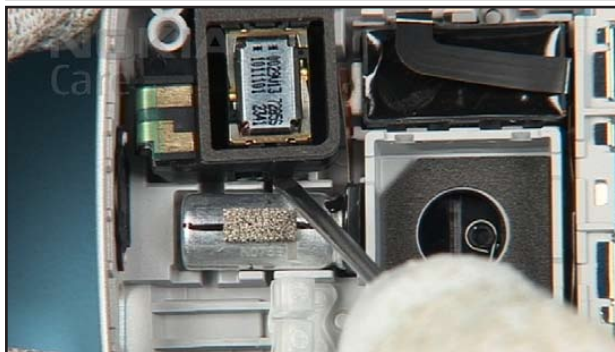

40. Unlock and remove the ANTENNA GPS ASSY.




41. Carefully remove the CAPACITOR with the SS-93.

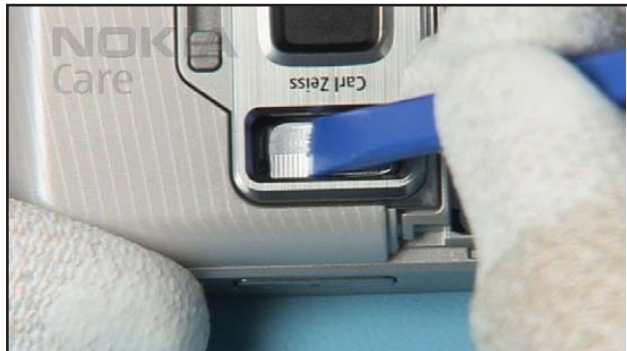


42. Remove the FLASH from B-COVER.



43. Carefully remove the FLASH MODULE...

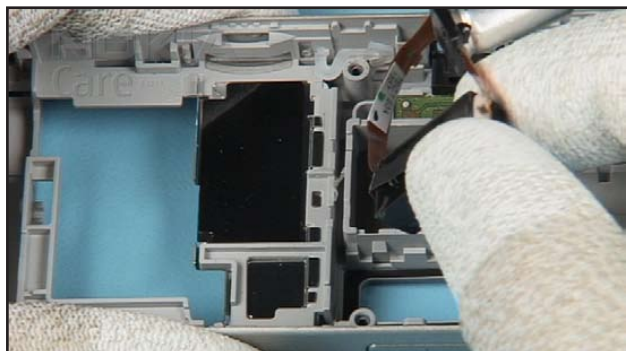

44. ...paying attention to the flex foil.

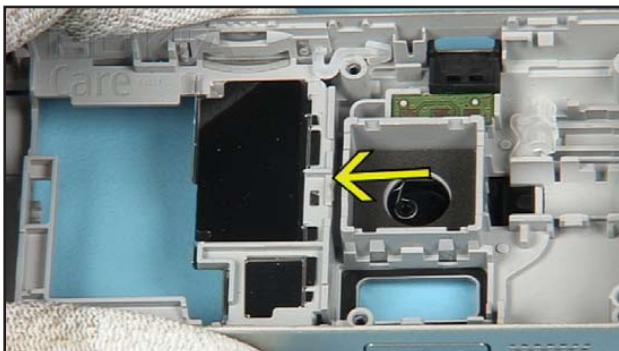

45. Remove the remaining adhesive.



46. Gently unlock the D-COVER ASSY with the SS-93.



47. Continue at the other side.



48. Move the D-COVER a bit to the left and remove it.