


12. DISASSEMBLY



1. Nokia N82 Disassembly.

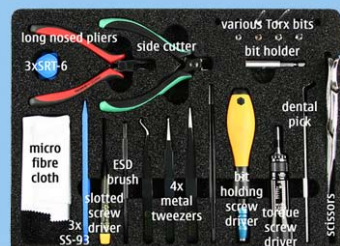

2. You will need the Nokia Standard Toolkit version 2. Also refer to the General Mechanical Guideline Video.



3. Unlock and remove the C-COVER ASSY. Remove the battery if inserted.



4. Use the SS-93 to open the snaps of the WINDOW ASSY.



5. Move the opening tool to the shown place and open the next snap.



6. Now, open the snaps on the top of the WINDOW ASSY.



7. Continue on the other side.



8. The WINDOW is hooked into the MAIN FRAME ASSY. To open the hooks gently press down the WINDOW in the middle and remove it.



9. Unlock all clips of the KEYMAT COVER.



10. Remove the KEYMAT COVER and discard it.



11. Unlock the bottom snaps of the UI Module.



12. Unlock both side snaps. Avoid damaging of the B-COVER.



13. Use the SS-93 as a lever and lift the UI MODULE from the MAIN FRAME ASSY.




14. Turn the UI MODULE to the shown side..



15. ...and very carefully open the UI MODULE connector.



16. Remove the MICROPHONE and discard the UI MODULE.

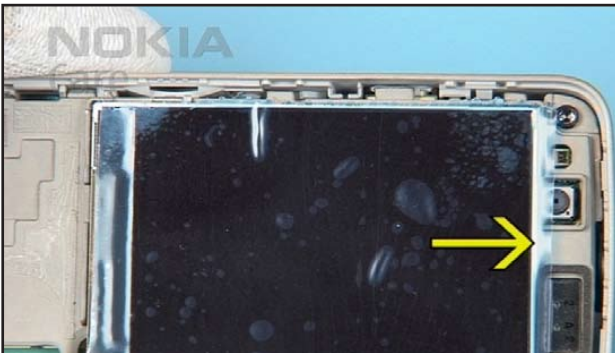


17. Carefully place the SS-93 between the LCD and the MAIN FRAME ASSY in the marked place.



18. Very carefully lift the LCD from the MAIN FRAME.



19. Gently open the LCD connector.

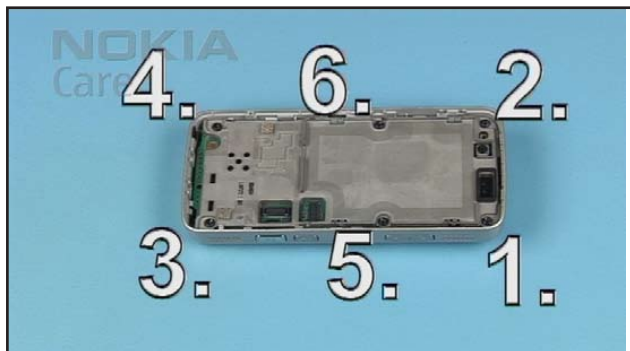

20. Undo the Torx PLUS size 6 screws in the order shown...




21. ... and remove them.



22. Unlock the MAIN FRAME ASSY starting at the shown side.



23. Open the next snap.

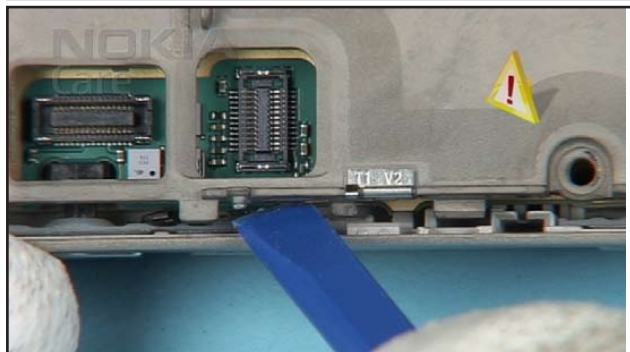


24. Open the snap on the other side.




25. Remove the MAIN FRAME ASSY from the B-COVER.




26. Remove the EARPIECE.

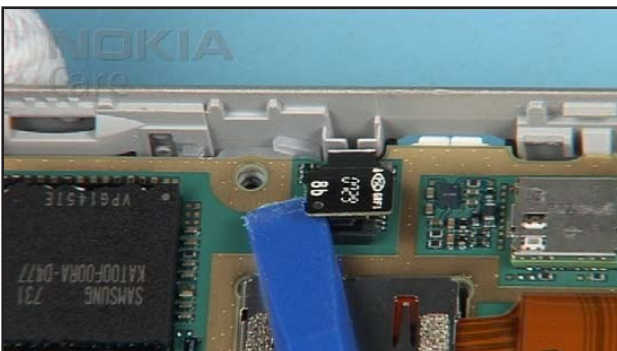


27. Carefully open the FLASH MODULE CONNECTOR.

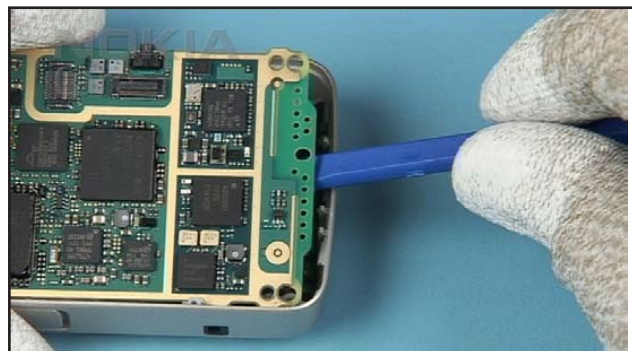

28. Gently lift the ENGINE MODULE from the B-COVER and remove it.

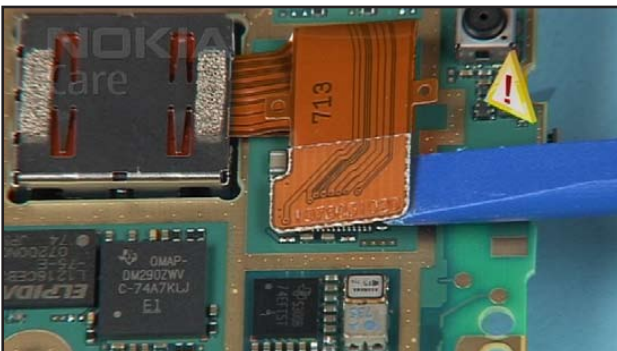


29. Carefully open the CAMERA connector.

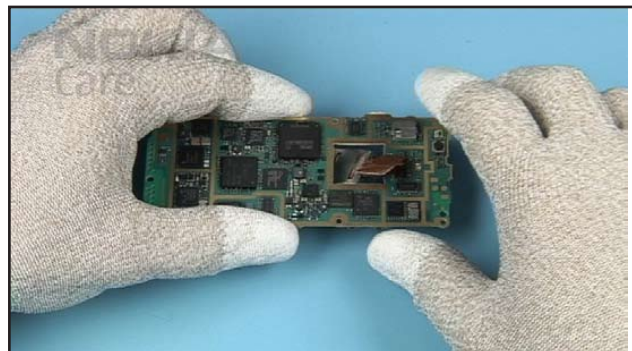

30. Separate the CAMERA MODULE from the PWB.



31. Remove the DC-JACK with the DC-Plug.

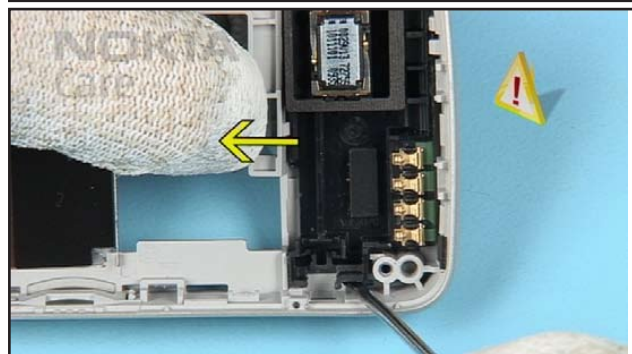

32. Unlock the ANTENNA CELLULAR ASSY.